

## Note

The ignition cables are now only available on the parts market by the meter. For this reason, the attached parts must be fitted with stop pliers before installing the ignition cables.

Ignition cables	cut to length.
Ends of cables	strip 6 mm.
Sleeve of cable screw	fit on and attach first to the insulation, then to the ignition cable core with the stop pliers.
Markings for individual cylinders	fit on. to ignition cables.
Spark plug connector	screw on.
Angle connector	screw on.

## Special tool

