



## 47-8252 Removing and installing regeneration switchover valve (fuel evaporation)

Operation No. of operation texts and work units or standard texts and flat rates:  
47-8252

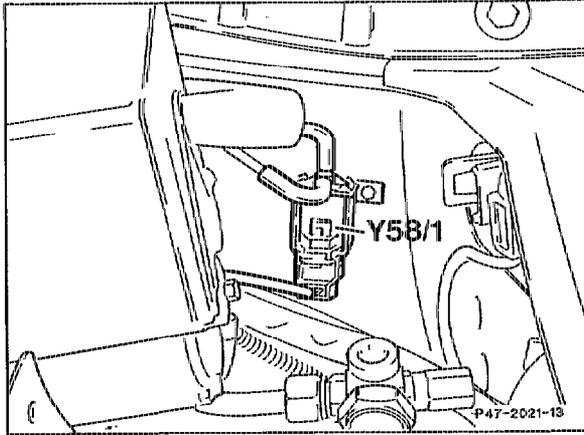

Model 129

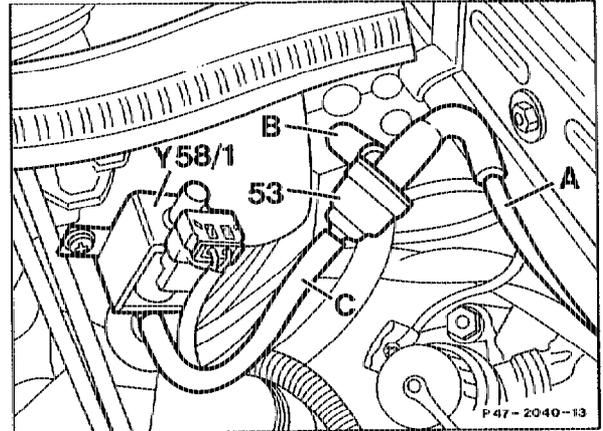

Model 124

Electrical connector at regeneration switchover valve .....

Both regeneration lines .....

Screw .....

Regeneration switchover valve (Y58/1) .....

CIS-E control unit fault memory .....

unplug, plug in.

at regeneration switchover valve (Y58/1), detach, fit on.

unscrew, screw in.

remove, insert.

read out, erase if necessary (see Diagnosis Manual Engine, Volume 2, Index 0).

### Note

Stored faults which may originate from test work resulting from cables being disconnected or from a simulation, must be erased in the fault memory after completing the work.