
82-2850 Removing and installing headlamp reflector

Preceding work: Headlamp unit removed (82-4730). Lens of headlamp unit removed (82-1820). Bulbs removed (82-1201).

Operation no. of operation texts and work units or standard texts and flat rates:

82-1850, 82-2830, 82-2840, 82-2990, 82-3000, 82-3010.

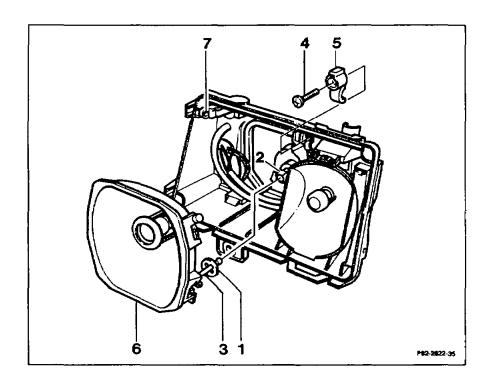

push back, fit on. Headlamp range control adjusting element (2) ... release by turning to the left, secure by turning to the right. Tie rod (3) of headlamp range control detach from headlamp range control adjusting element (2), attach. Phillips screw (4) unscrew, screw in. Holder (5) take off, fit on. remove from mounting (7), replace. adjust lighting (82-1130). After installing headlamp unit